

# Sagewash<sup>TM</sup> Sanitizer

THE ULTIMATE LOW PRESSURE SANITIZING SYSTEM

Dear SAGEWASH<sup>TM</sup> SANITIZER Owner:

Congratulations! You have just purchased a very durable, economical and environmentally sound cleaning system.


SAGEWASH<sup>TM</sup> SANITIZER U.S. Patent, #5,441,073 is not just a hose-end sprayer. Your SAGEWASH<sup>TM</sup> SANITIZER system is a precisely-calibrated sanitizer.

The HTH chlorine tablet is a highly compressed calcium hypochlorite product. The hydro-injection system uniformly erodes the tablet into a mixing chamber. The concentrate is then mixed with the stream of water leaving your hose.

Using SAGEWASH<sup>TM</sup> SANITIZER (a calcium hypochlorite solution), rather than sodium hypochlorite (liquid bleach), is the most effective and economical way to sanitize and disinfect.

## READ AND UNDERSTAND ALL WARNINGS AND INSTRUCTIONS BEFORE USING YOUR SAGEWASH<sup>TM</sup> SANITIZER

- **ALWAYS USE EYE PROTECTION!**
- **ALWAYS HANDLE HTH TABLETS BY THE PLASTIC JACKET!**
- **ALWAYS USE IN A WELL-VENTILATED AREA!**
- **KEEP AWAY FROM CHILDREN!**
- **USE ONLY APPROVED SAGEWASH<sup>TM</sup> SANITIZER TABLETS IN THE SAGEWASH<sup>TM</sup> SANITIZER!**
- **FOLLOW ALL INSTRUCTIONS ON THE HTH TABLET PACKAGE!**
- **USING ANY OTHER SUBSTANCE IN THE SANITIZER CAN CAUSE BODILY HARM AND UNIT FAILURE!**
- **DO NOT MIX ANY CHEMICALS INTO THE SAGEWASH<sup>TM</sup> SANITIZER CONTAINER!**
- **NEVER USE PRODUCTS THAT CONTAIN AMMONIA WITH YOUR SAGEWASH<sup>TM</sup> SANITIZER!**
- **DO NOT DISASSEMBLE THE UNIT IN ANY WAY!!!!**

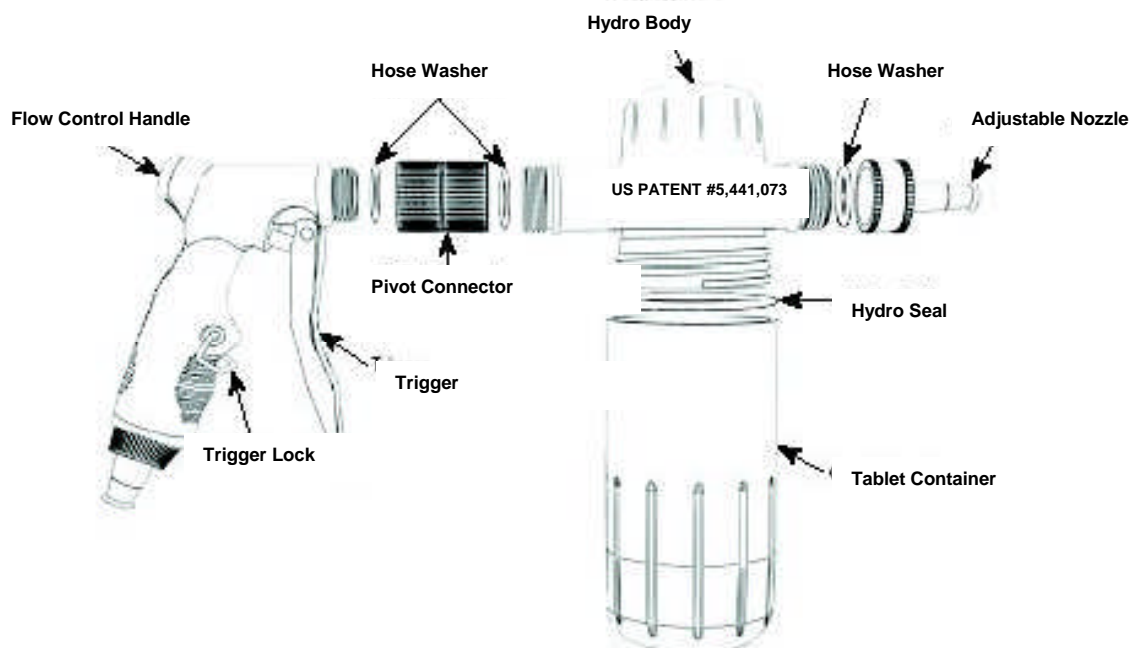

Hang Instructions at point of use! Please call SAGEWASH<sup>TM</sup> SANITIZER for extra sets of instructions!

**Hang Instructions at point of use! Please call SAGEWASH™ SANITIZER for extra sets of instructions!**


### **PREPARING TO USE YOUR SAGEWASH™ SANITIZER!**

1. Place HTH tablet in the tablet container. **DO NOT IN ANY SITUATION REMOVE PLASTIC JACKET FOR TABLET.** The jacket is there to protect the operator from touching chlorine. Hand tighten tablet container to hydro body. Tighten until snug **ONLY!**
2. Connect the male end of the water hose to the female quick connector.
3. Attach the SAGEWASH™ SANITIZER into the quick connector.
4. Make sure all fittings are secure.
5. Turn water on at water source and check for leaks.
6. Squeeze the Flow Control Handle's trigger located on the SAGEWASH™ SANITIZER and check for leaks.
7. **PLEASE NOTE:** the Flow Control Handle's trigger is equipped with a lock. Squeeze trigger and point down to lock. Squeeze trigger and point up to release.

### **SANITIZING WITH YOUR SAGEWASH™ SANITIZER**

#### **REMEMBER TO PICK UP SOLID BIO-MATTER AND RINSE WITH FRESH WATER BEFORE BEGINNING CLEAN UP!**

1. Make sure work area is well ventilated.
2. Begin to disinfect target area. It is not necessary to **OVERUSE** the solution.
3. After cleaning is done, turn off water spigot. Disconnect SAGEWASH™ SANITIZER from hose, allowing it to drain over a gutter/drain area, or mix with a gallon of water to make a disinfecting solution. Once disconnected from hose, the discharging solution is highly concentrated. Avoid contact with skin or clothes.
4. Wash down area where SAGEWASH™ SANITIZER was drained. Failing to do this may leave calcium deposits on the floor. Set the SAGEWASH™ SANITIZER, properly drained, in a cool, dry storage area out of the reach of children.

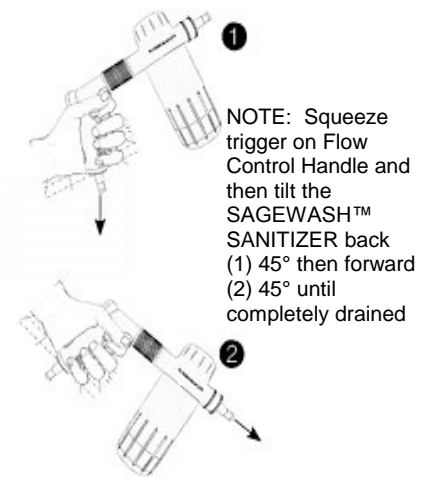

**CAUTION: DRAIN AFTER EACH USE!**

### **WATER SUPPLY**

Water flowing through the SAGEWASH™ SANITIZER will be chlorinated by the HTH chlorine tablet. The exact amount of chlorine dispensed is influenced by the rate of flow, water pressure and the temperature of the water. It is strongly recommended that the water pressure inside the SAGEWASH™ SANITIZER unit not exceed 70 psi. Higher pressures may damage the unit. This includes water pressure surges (water hammer) that exceed 70 psi.

### **MAINTENANCE PERIODIC CLEANING**

Under normal circumstances no maintenance is necessary beyond the replacement of HTH tablets. If dirty or excessively mineralized water is used it may be necessary to periodically clean the inside of the sanitizer. Clean the inside of the SAGEWASH™ SANITIZER unit with white vinegar once monthly. Chlorine naturally precipitates contaminants in the water. Hydro seal and hose washers may need to be replaced periodically. See parts list to replace.

### **STORAGE**

Store tablets in a cool, dry, and well-ventilated area, away from heat or flame. **DO NOT** handle wet or partially used tablets. Rotate tablet stock to insure maximum potency. Only store in original tablet packaging.

### **SAGEWASH™ SANITIZER WARRANTY**

The original purchaser of a SAGEWASH™ SANITIZER (proof of purchase required) has a one year warranty. No other guarantees are expressed or implied. SAGEWASH™ SANITIZER will repair or replace any unit that fails due to material workmanship. This warranty does not include nozzles, quick connects, hose washers, hydro seals, etc., which are available and replaceable at [www.sagesanitizingsystems.com](http://www.sagesanitizingsystems.com)

The manufacturer and distributor of SAGEWASH™ SANITIZER assume no responsibility for misuse, accidents or damage caused by the operator of SAGEWASH™ SANITIZER.

**SAGEWASH™ SANITIZER is protected by U.S. Patent #5,441,073 for additional information, contact: SAGE SANITIZING SYSTEMS**

**Unit 4, Cheney Manor Industrial Estate, Swindon, Wilts, U.K. SN2 2UD**

**Telephone +44 (0) 1793 603487 Fax: +44 (0) 1793 603489**

**USA Toll Free: Tel: 1 866 264 8895 (Service) Tel: 1 866 264 8896 (Sales) Fax: 1 866 264 8897**

**e-mail: [sagesales@sagesanitizingsystems.com](mailto:sagesales@sagesanitizingsystems.com)**

**[www.sagesanitizingsystems.com](http://www.sagesanitizingsystems.com)**